






## Vertical freestanding storage system


G760series V1.0

Caution – Failure to follow these guidelines can result in property damages or personal injury


- Parts are not labeled. Before assembly, please identify each part according to the descriptions and diagrams below.
- Do not use if the product or any parts is defective.
- Do not tilt or lift the storage rack.
- Do not drop kayak or any object on the rack. Place objects carefully and slowly.
- Do not step, stand, or climb on the storage unit.
- Do not use if loads are not balanced and / or cannot be used on level and secure ground. Always make sure the rack will not tip over. Secure the rack to the wall or floor if necessary.
- Do Not Use if kayak or canoe cannot be safely placed and secured on this rack.
- Strap kayaks to the center of the rack as much as possible to prevent shifting of kayaks.
- Use only if you determine the rack can be used safely.
- The manufacture and its agents are not responsible for any damages or injuries caused by the use or misuse of the product.
- This rack is intended for indoor use. This rack may also be used outdoors under certain weather and climate conditions with proper care and protection only. Use outdoors only if there are no wind and no ground movement. Do not use on boat docks.
- Use of this product outdoors will reduce the life of this rack. Use of this product outdoors will void all warranty.
- Please follow the instructions and observe weight and size limits.  
Maximum Kayak Length: 11 feet each. Maximum Weight for each kayak: 65 Lbs. Maximum 3 kayaks.
- When moving the storage rack, remove all objects from the rack.
- Warranty: 1 year Limited Manufacture's Warranty.
- For technical support or questions regarding this product, please contact  
626-338-8998. PST 9:00 AM to 3:00 PM.

### Parts:

- A. base (3 pcs) 
- B. lower vertical post (3 pcs) 
- C. upper vertical post (3 pcs) 
- D. Top Cradle (1 pc) 
- E. Cradle ends (3 pcs) 

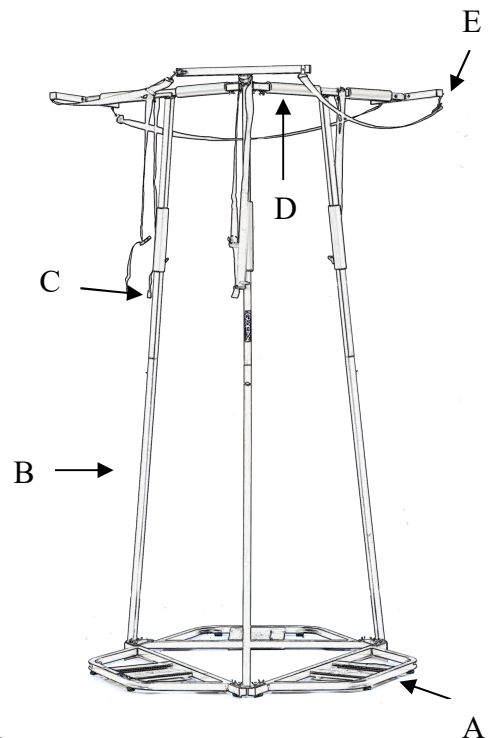


### Hardware:

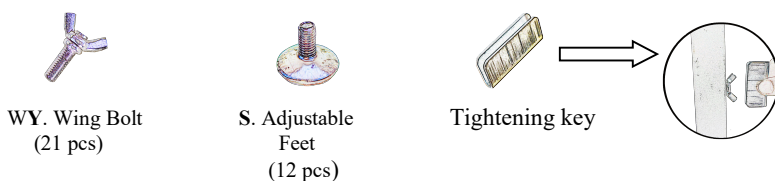


### Pre-Assembly for Part A

Install (Part S) adjustable Feet onto the bottom of (Part A) Base.

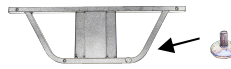


### Pre-Assembly for Part D

Locate Part D and expand the cradle arms. Secure and tighten each cradle arm with wing bolt (WY). Make sure you tighten all the nuts and bolts before going to the next step.

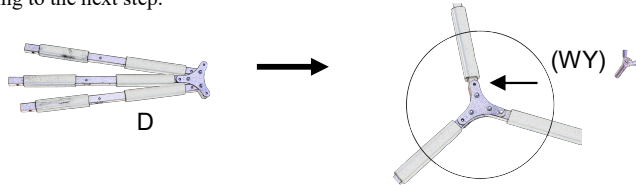

### Assembly Instruction:

- Step 1. Locate the 3 pcs of the base (Part A) and place them forming a triangular shape.
- Step 2. Place the vertical post (Part B) on top of every corner of the Base (Part A) tighten using wing bolt (WY)
- Step 3. Insert UPPER VERTICAL POST (Part C) to the LOWER VERTICAL POST (Part B) and tighten with wing bolt (WY).  
**(Make Sure top of UPPER vertical tube (part C) is pointed towards the OUTSIDE of the rack)**
- Step 4. Place assembled Top Cradle (Part D) already assemble onto the UPPER vertical post (part C). Once (Part D) is already in place, tight the cradle arm onto the UPPER vertical post (Part C) with wing Bolts. (WY)
- Step 5. Locate 3 pcs of (Part E) insert them into (Part D) and lock with push pin.

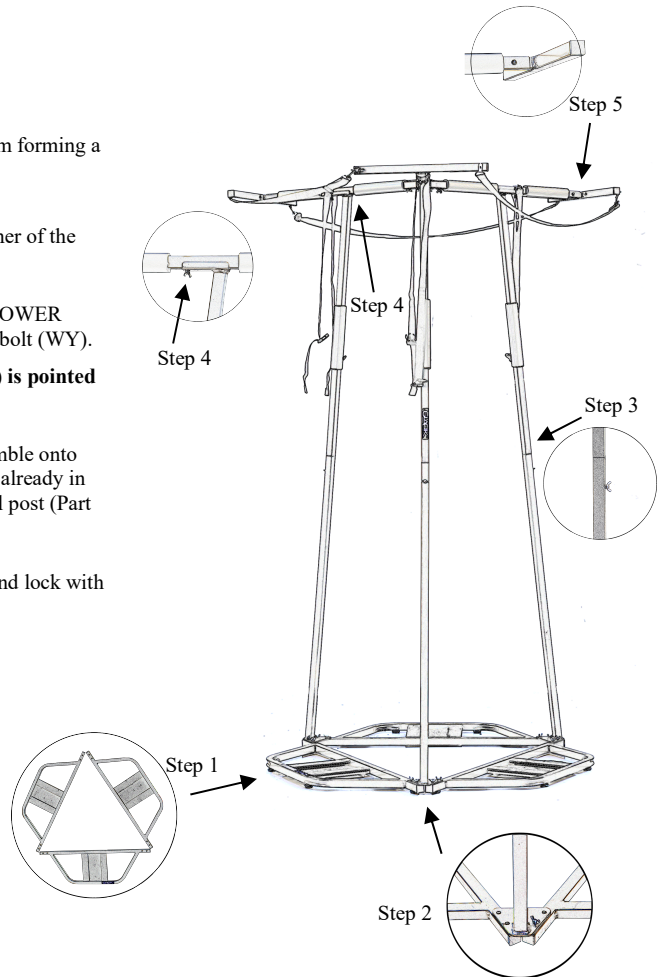

### **Make sure all nuts and bolts are tightened**

Secure and tighten the products to center of the rack with straps. Latch and tighten safety straps.

Please check our website for instruction manual updates

**This product may be used for Kayak, Paddleboard (SUP), Surfboard, Canoe, and other similar devices.**

**Glacik Paddlesports, by Sparehand Systems**

[www.sparehandsystems.com](http://www.sparehandsystems.com)

[info@sparehandsystems.com](mailto:info@sparehandsystems.com)

G760series V1.0