

PREMIUM QUALITY


- SUPER STRONG & SECURE
- TREATED UV WEBBING
- HIGH DENSITY EVA FOAM PADS
- SILICONE COVERED BUCKLES

INSTRUCTIONS

- Open doors on both sides of vehicle
- Lay Wrap Rax flat on roof at least 2ft apart, parallel to one another
- While doors are open run straps through inside of car its good to twist the webbing 3 or 4 turns before securing to buckle to avoid humming of webbing
- Secure the straps through the buckle and pull tight

SECURING BOARDS TO WRAP RAX

- Place boards fins up and facing front of vehicle
- Secure strap over boards and secure in buckle and pull tight.
- If boards extend more than 3 ft beyond Wrap Rax pads (eg Longboards,) they need to be secured in front to avoid excessive wind force.
 Its better to have more board off back of rack and less in front.

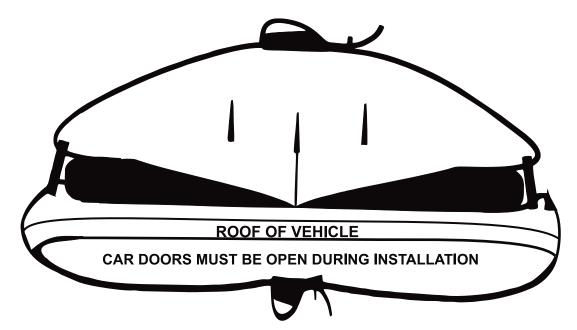

EXTRA TIPS

- Always inspect Wrap Rax during travel and before that the load is secure and that there is no wear of tear
- If there is nay humming noise from your rax simply undo webbing and twist the straps multiple times and secure to eliminate noise.

 Excessive humming can cause webbing damage and failure

Disclaimer

Your wrap Rax should be installed exactly as provided instructions state. Blocksurf or seller is not liable for damage to property due to improper installation and use of the Wrap Rax or liability of any nature for injury by this product to any person or persons or property of buyer, user, or other persons. Not recommended for high speed driving