

INSTALLATION GUIDE BLAT WOOD SKI RACK

BLAT Ski Rack

Quantity: 1

WARNING! The BLAT Ski Rack is NOT intended for use by any person under the age of 18 years old. You must be over the age of 18 to install or use the BLAT Ski Rack.

WARNING! Strictly follow all instructions to avoid an accident, damage to property, personal injury or death.

WARNING! Do not use this product for human suspension. Components can fail causing person to fall, possibly resulting in serious injury or death.

WARNING! When operating system, make sure the area below object is clear of persons. If object comes down too quickly, this can cause an accident.

READ THE ENTIRE USER MANUAL BEFORE INSTALLATION

The User Manual you received with your BLAT Ski Rack provides instructions on how to install and use your BLAT Ski Rack. The instructions are written for a person with a basic understanding of tools and procedures. Read the entire manual before proceeding. If you do not understand any portion of the instructions, do not attempt installation, and email info@storeyourboard.com.

CORRECTLY INSTALL THE PRODUCT

Read and follow all instructions carefully.

Failure to properly install and use the BLAT Ski Rack could allow the product to detach from the wall, injuring persons or personal property in the process. Accordingly, it is critical that the BLAT Ski Rack be installed correctly and according to the instructions in the User Manual.

USE TOOLS SAFELY

The procedures in the User Manual may require climbing ladders and/or operating power tools. Make sure you are familiar with these tools and their safety procedures before attempting to use such tools during installation. Always be aware of electrical wires during installation. Failure to do so could result in an electrical shock or death.

WARNING!

Contact with wires can give you a severe electrical shock, which may cause injury or death. If you do not know where wires are, have the work done by an experienced professional.

△ IMPORTANT INFORMATION

CAUTION

It is the consumer's responsibility to install this system in accordance with all codes, ordinances, and local regulations.

When installing the BLAT Ski Rack, it is the consumer's responsibility to ensure the structural integrity of the structure it is being mounted to.

The BLAT Ski Rack is intended for the storage of ski equipment only. Do not use it for any other purpose.

This system has a maximum capacity of 150 lbs. Overloading the system could result in damage to property or injury.


Use extreme caution when loading and unloading equipment from this system.

It is the consumer's responsibility to ensure that the system is in proper working condition before loading objects onto the system. Check tightness of all bolts and screws periodically. Failure to properly maintain the system could result in damage to property or injury.

WARNING AND DISCLAIMER

Spire LLC (d/b/a StoreYourBoard) expressly disclaims any and all liability for personal injury, property damage or loss, whether direct, indirect, incidental, resulting from the incorrect mounting, improper use, inadequate maintenance, or neglect of this system.

INSTALLATION

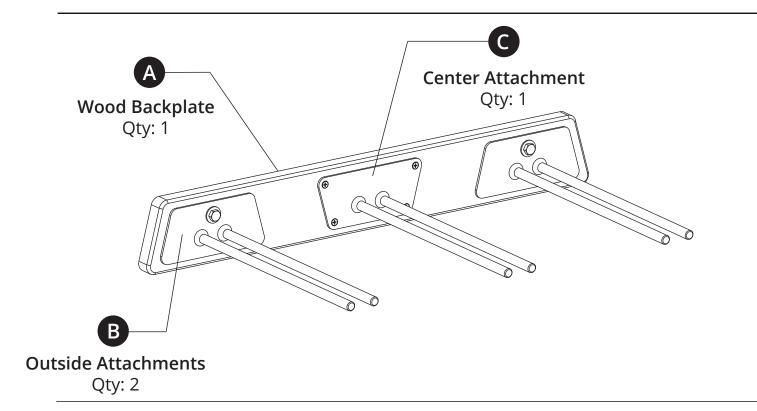

INCLUDED HARDWARE:




RECOMMENDED TOOLS:

Drill/Driver
Drill bits
12mm Socket/Driver
Level
Tape measure
Pencil
Stud finder


WEIGHT LIMITS:


150 lbs. max 50 lbs. max per attachment NOTE: The BLAT rack must be mounted to study to achieve the advertised weight limit

- Find two adjacent studs where you want to mount the product. The rack's mounting holes are intended to align with standard 16" spaced wall studs. Use a stud finder to determine the exact location of each stud and lightly mark them with a pencil.
- Hold the Wood Backplate (A) up to the wall where you want to mount it and align the mounting holes as seen below with the stud locations. Use a level to ensure the rack is horizontal with the floor and mark the two mounting hole locations with a pencil.

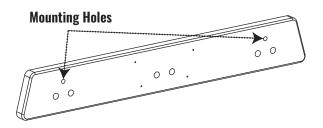

- Use a 3/16 inch (4.7mm) drill bit to drill pilot holes into the previously marked mounting hole locations.
- Install the Outside Attachments (B) as seen below. Place a Machine Washer (E) onto a Wall Screw (D) and screw into the previously drilled holes.

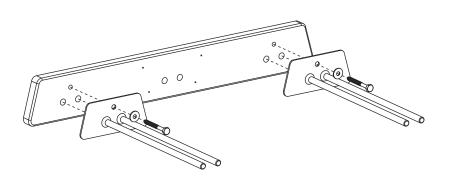

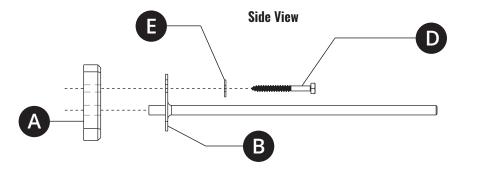

INSTALLATION

5

Using 4 Wood Screws (F), secure the Middle Attachment (C) to the Wood Backplate (A) using a phillips screwdriver.

