

INSTALLATION GUIDE E-SERIES POWER TOOL RACK



SCAN THIS QR CODE FOR THE FULL INSTALL VIDEO.

△ IMPORTANT INFORMATION

E-Series Power Tool Rack

Manufactured for Spire LLC by Tellbe in Vietnam

Quantity: 1

WARNING! The E-Series Power Tool Rack is NOT intended for use by any person under the age of 18 years old. You must be over the age of 18 to install or use the E-Series Power Tool Rack.

WARNING! Strictly follow all instructions to avoid an accident, damage to property, personal injury or death.

WARNING! Do not use this product for human suspension. Components can fail causing person to fall, possibly resulting in serious injury or death.

WARNING! When operating system, make sure the area below object is clear of persons. If object comes down too quickly, this can cause an accident.

READ THE ENTIRE USER MANUAL BEFORE INSTALLATION

The User Manual you received with your E-Series Power Tool Rack provides instructions on how to install and use your E-Series Power Tool Rack. The instructions are written for a person with a basic understanding of tools and procedures. Read the entire manual before proceeding. If you do not understand any portion of the instructions, do not attempt installation, and email info@storeyourboard.com

CORRECTLY INSTALL THE PRODUCT

Read and follow all instructions carefully.

Failure to properly install and use the E-Series Power Tool Rack could allow the product to detach from the wall, injuring persons or personal property in the process. Accordingly, it is critical that the E-Series Power Tool Rack be installed correctly and according to the instructions in the User Manual.

USE TOOLS SAFELY

The procedures in the User Manual may require climbing ladders and/or operating power tools. Make sure you are familiar with these tools and their safety procedures before attempting to use such tools during installation. Always be aware of electrical wires during installation. Failure to do so could result in an electrical shock or death.

WARNING!

Contact with wires can give you a severe electrical shock, which may cause injury or death. If you do not know where wires are, have the work done by an experienced professional.



△ IMPORTANT INFORMATION

CAUTION

It is the consumer's responsibility to install this system in accordance with all codes, ordinances, and local regulations.

When installing the E-Series Power Tool Rack, it is the consumer's responsibility to ensure the structural integrity of the structure it is being mounted to.

The E-Series Power Tool Rack is intended for the storage of power tools only. Do not use it for any other purpose.

This system has a maximum capacity of 8.75 lbs per slot and 35 lbs. per unit. Overloading the system could result in damage to property or injury.


Use extreme caution when loading and unloading equipment from this system.

It is the consumer's responsibility to ensure that the system is in proper working condition before loading objects onto the system. Check tightness of all bolts and screws periodically. Failure to properly maintain the system could result in damage to property or injury.

WARNING AND DISCLAIMER

Spire LLC (d/b/a StoreYourBoard) expressly disclaims any and all liability for personal injury, property damage or loss, whether direct, indirect, incidental, resulting from the incorrect mounting, improper use, inadequate maintenance, or neglect of this system.

INSTALLATION

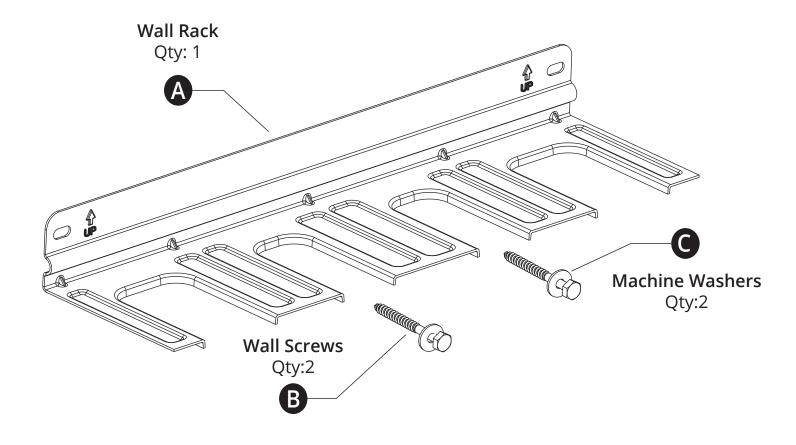

RECOMMENDED TOOLS:

Drill/Driver
Drill bits
Socket/Driver
Level
Tape measure
Pencil
Stud finder

WEIGHT LIMITS:

35 lbs. max per unit 8.75 lbs. max per slot NOTE: The E-Series Power Tool Rack must be mounted to study to achieve the advertised weight limit

Use a stud finder to find two adjacent studs where you want to mount the product and mark the locations with a pencil.

Hold the rack up to the wall where you want to mount it and align the mounting slots with the stud locations. Use a level to ensure the rack sits flat to the ground and mark both mounting slots.

Use a 3/16 inch (4.7mm) drill bit to drill pilot holes into the studs where you marked them.

A Machine Washer (C) should be used between the Wall Rack (A) and the Wall Screw (B) as shown in the figure below. Insert the Wall Screws (B) with Machine Washers (C) into the pilot holes to mount the rack.

